



***Electrak***<sup>®</sup>

Garden Tractor

**E20** Owner's Use and Care Manual



GENERAL  ELECTRIC



# Contents

	Page
Introduction . . . . .	1
Warranty Registration . . . . .	1
Plug-In . . . the key to automatic refueling . . . . .	1
Safety Practices . . . . .	2
Operation . . . . .	2
Attachments . . . . .	4
Tractor Controls . . . . .	4-8
Safety Interlocks . . . . .	8
Power Pack Care and Charging . . . . .	10
Lubrication . . . . .	13
Service and Maintenance . . . . .	13-16
Storage . . . . .	16
Periodic Service Chart . . . . .	17
Specification Chart . . . . .	17
Troubleshooting Checklist . . . . .	18
ELEC-TRAK <sup>®</sup> Attachments and Accessories . . . . .	20
Warranty . . . . .	Back Cover

<sup>®</sup> TRADEMARK

This manual does not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to your authorized ELEC-TRAK dealer.

# Introduction

Congratulations! You now own a fine product produced by the General Electric Company, which has been built to assure you high quality and excellent service.

Electricity is the cleanest, most dependable and economical source of power. Every day, all around you and often taken for granted, electrical power is working for you . . . heating, cleaning, lighting, and cooling.

The ELEC-TRAK<sup>®</sup> garden tractor is the result of careful design engineering with the operator foremost in mind. Safety, ease of operation, economy, ruggedness, and maintenance-free features are built into the ELEC-TRAK tractor.

This manual has been carefully prepared to instruct you in operating, maintaining, and lubricating your ELEC-TRAK. **IT IS VERY IMPORTANT THAT EACH OPERATOR FULLY UNDERSTANDS THE ENTIRE CONTENTS OF THIS MANUAL FOR SAFE, DEPENDABLE OPERATION AND TO PROLONG THE LIFE OF THE EQUIPMENT.**

Your ELEC-TRAK dealer is equipped with a complete stock of genuine ELEC-TRAK tractor parts. He has factory-trained service personnel using the latest approved test and repair equipment and will service your tractor to assure safe, efficient, and economical operation. **UNAUTHORIZED SERVICE VOIDS WARRANTY. HOWEVER, BEFORE CALLING YOUR DEALER FOR SERVICE, SEE THE TROUBLESHOOTING CHECK LIST ON PAGE 18.**

## WARRANTY REGISTRATION

Your dealer must complete and submit a Dealer Delivery Report to General Electric before your Warranty Registration can be sent to you. To assure proper warranty coverage be sure that the dealer prepares this form for you with a copy properly dated and sent to the General Electric Company at the address shown below.

Manager — Product Service  
Outdoor Power Equipment Operation  
General Electric Company  
Corporations Park  
Schenectady, New York 12305

Your dealer will also record the ELEC-TRAK Warranty Registration and model and serial number of your General Electric tractor.

Remember to specify model and serial number shown under the hood when ordering parts.

## Plug-In . . . The key to automatic refueling

The ELEC-TRAK tractor is designed to refuel itself and always be ready for service if it is plugged in and the charger dial turned to the appropriate "Start" position. **IT SHOULD ALWAYS BE PLUGGED INTO A 3 WIRE (GROUNDED) 110 VOLT OUTLET WHEN NOT IN USE.** When turned on, the charger automatically senses the power pack condition and adjusts the charging rate to the proper level to bring the power pack to a fully charged condition as fast as possible. The charger timer will continue to move for several

hours after full charge is reached but the charge rate is very low and only assures equalization of all the individual cells.

It is especially valuable to put the tractor on charge during any short breaks in operation (10 minutes or longer), since the high rate of input during the early part of the recharge cycle re-activates the power pack's plates and adds considerable range to the work period.

**THE POWER DISCONNECT MUST ALWAYS BE ENGAGED TO PERMIT RECHARGING.**

