



Elec-Trak[®]

Tractor


PRODUCT SERVICE BULLETIN NO. 7

May 7, 1971

Lift Strap Guard 541C997P1 & P2

Lift strap guards are being provided at no charge until August 1, 1971 for installation at your convenience in tractors already sold or in your inventory. One guard will be provided for each Elec-Trak tractor which you have received from GE. The guard is easily inserted in the lift as described herein and will protect the lift strap from fraying and from interference with the take-up discs. **NOTE:** You must be sure to furnish the correct guard P1 or P2 for each lift as given in Table I.

Fig. 1

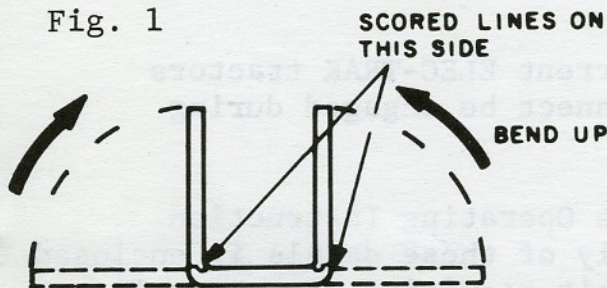

NOTE: Lift strap guard is installed between take-up axle discs.

TABLE I

Model No.	Remove Bolt/Spacer	Lift Strap Guard Length
E12AA	A	6½" (Part 2)
E15AA	A	6½" (Part 2)
E15BA*	A	6½" (Part 2)
All others	B	5½" (Part 1)

*Some later E15BA models may require the 5½ inch guard.

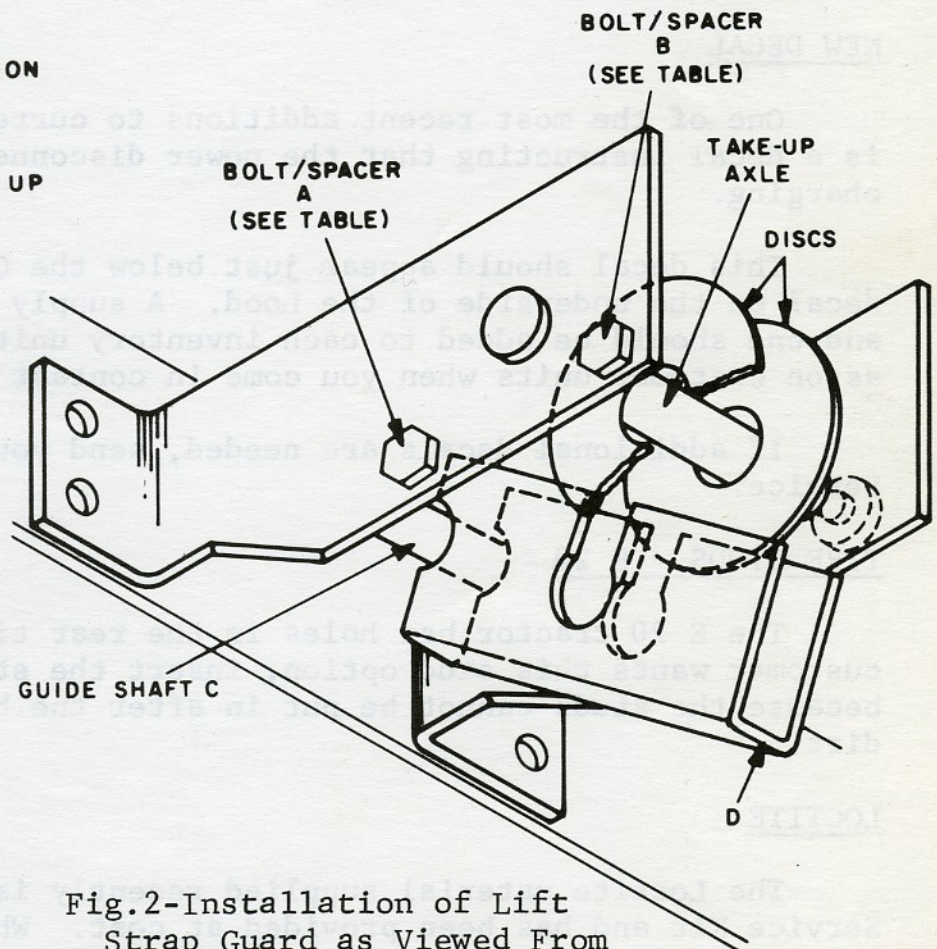


Fig.2-Installation of Lift Strap Guard as Viewed From Under Front of Tractor

Lower any front mounted attachments fully to remove all load from the lift strap before installing the guard. Leave the strap in its normal threaded position.

OVER

General Electric Company
Outdoor Power Equipment Operation
Corporations Park, Bldg. 702
Schenectady, N. Y. 12345

GENERAL  ELECTRIC

