



ElecTrak TRACTOR

Dealer Set Up and Delivery Check List

Check the following items:

1. Check wiring for loose connections prior to installing cover
 - A. Power resistor
 - B. Lower control panel
 - C. Upper control panel
 - D. Drive motor
 2. Power Pack
 - A. Trays and poly bags installed
 - B. Batteries tightly connected
 - C. Protective grease on battery terminals
 - D. Electrolyte level 1/4"—3/4" above perforated plate
 - E. Covers & clamps installed
 - F. Spacer between battery and control panel
 3. Lift (test with attachment)
 - Up
 - Down
 4. Headlight and dash light— on & off
 5. Throttle

With the shift lever in neutral, advance the throttle through all speeds and note the following number of speed changes.

Forward speeds

E---12 (3) E---15 (7) E---20 (8)

Reverse speeds

E---12 (2) E---15 (3) E---20 (4)
- Note: Power use gage should not be in red zone in any operating speed; although initial motor starting will normally deflect the meter to full scale momentarily. Cold weather may cause high currents until tractor runs for a short period of time.
6. Seat switch safety shutoff (return to off and restart drive motor and PTO)
 7. Key shutoff (same test as seat switch)
 8. Start charger and check For increase in fuel level gage reading
 9. Check for oil leaks around transaxle (bolts tight)
 10. Check brake switch shutoff adjustment. Drive motor should shut off when brake pedal is approx. 1/4" from footrest.
- Perform the following:
11. Adjust tire pressure to 15# front 10# rear
 12. Grease spindles, front wheels and pivot pin
 13. Oil brake pedal shaft and lift spool shafts
 14. Charge batteries upon receipt and before delivery!