



Electrak[®]

GEH-3952A

Tractor

INSTRUCTIONS

FRONT MOWER GUIDE

Keep for Reference

The Front Mower Guide improves the performance of the Elec-Trak mower by restraining the mower arms to eliminate side motion so control is improved in trimming around trees and shrubs. It also prevents the mower deck paint from being scraped during lifting, and provides a stable mower when raised for transportation or for mowing high grass.

are inserted in the frame slots on each side of the front bumper. The tabs are intended to be spring-loaded against the side walls of the tractor frame. For ease of assembly, insert one tab approximately one-half inch into the slot and push sideways on the opposite tab to line up with the slot and then push the mower guide in against the bumper. (See Fig. 1.)

INSTALLATION

The front mower guide is installed on the front of the tractor with its roller nearest the ground. The two rectangular tabs on each side of the mower guide

Remove the upper right carriage bolt from the bumper and pass it through one of the clamps supplied so that when the bolt is reinstalled, the clamp holds the mower guide in place. Install another clamp on the upper left bumper carriage bolt in the same way. (See Fig. 2.)

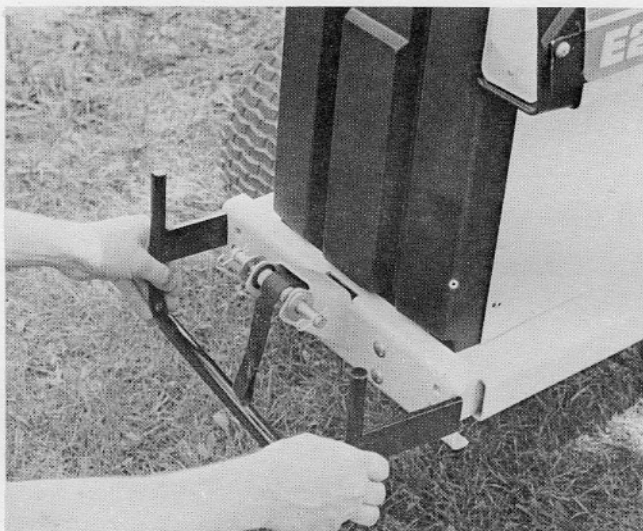


Figure 1

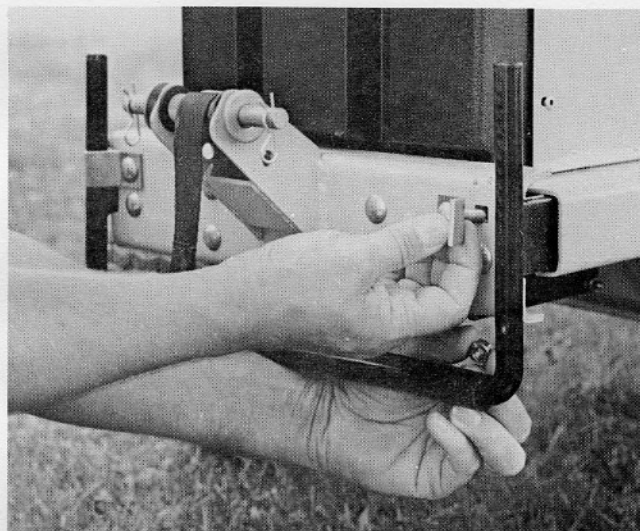


Figure 2

General Electric Company
Outdoor Power Equipment Operation
Corporations Park, Bldg. 702
Schenectady, N. Y. 12345

GENERAL  ELECTRIC