


# AL 40 LOADER



**owners manual**

# MOUNTING INSTRUCTIONS FOR MODEL A1.40 LOADER

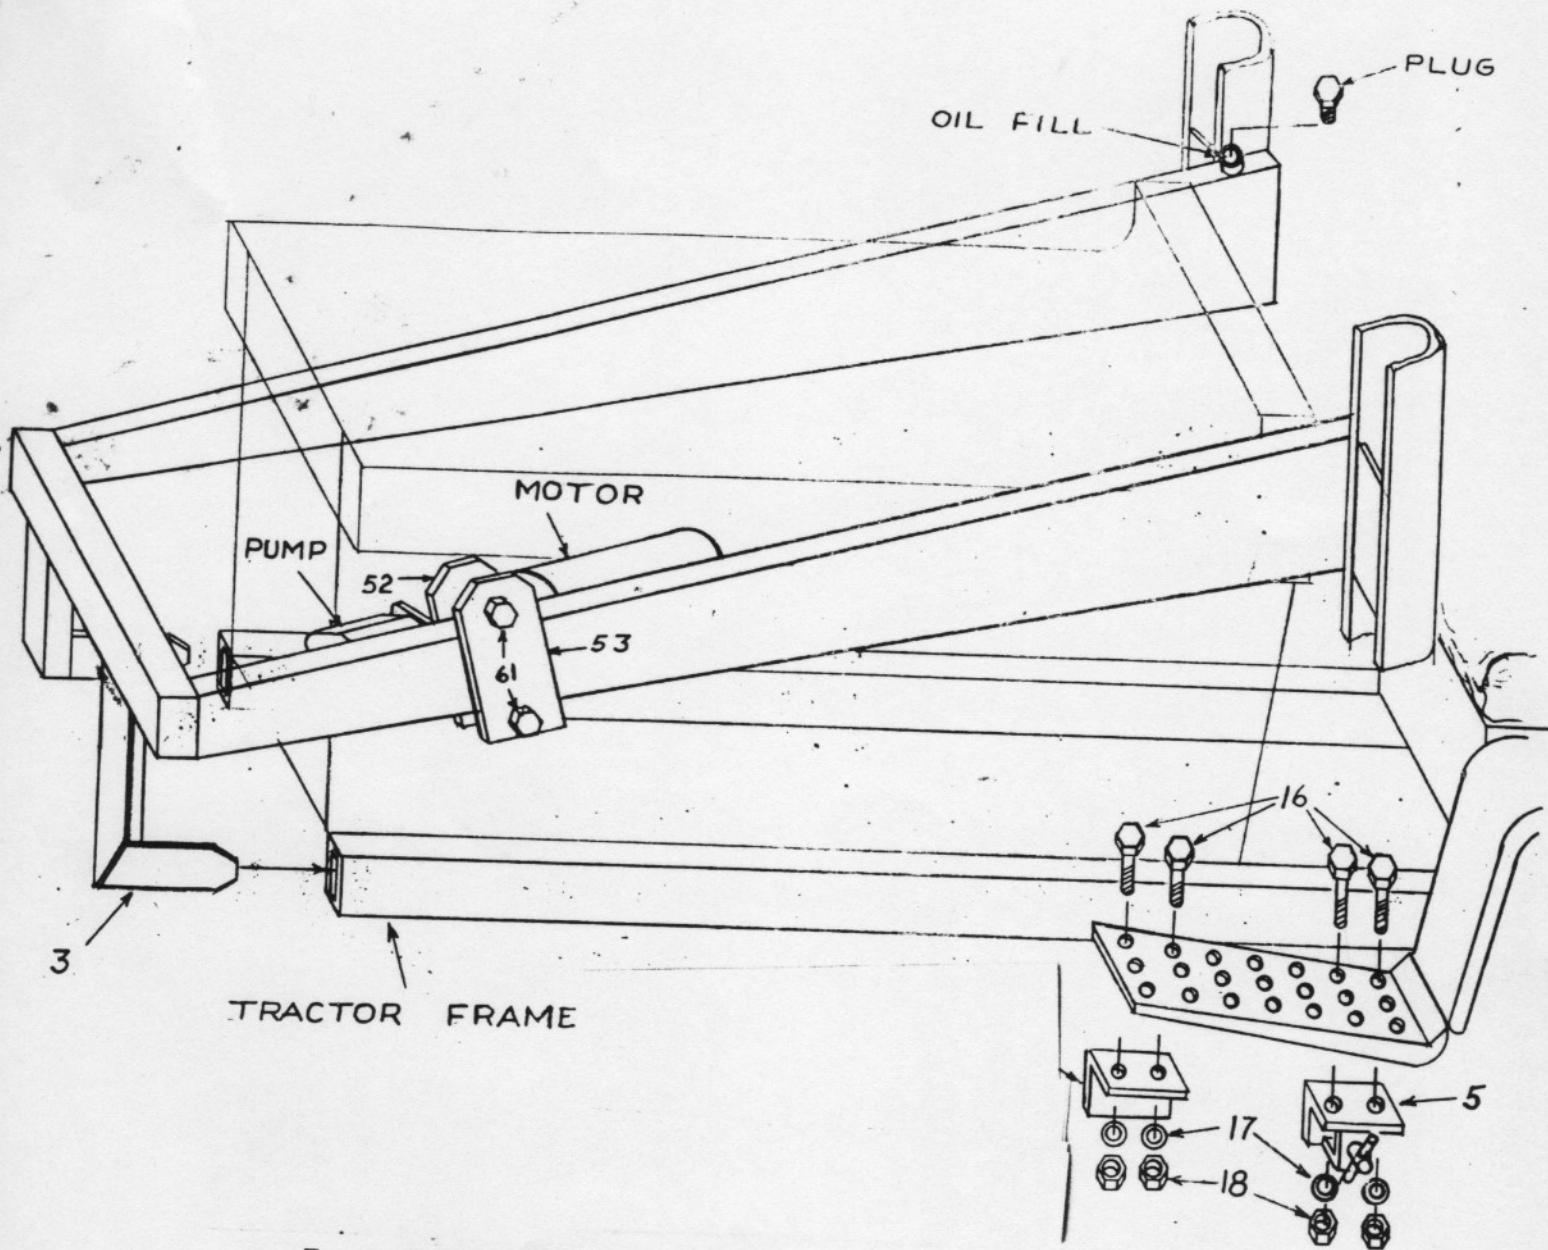

To install the Bucket Loader on 1-5 Tractor:  
Remove Left Front Fender.

Attach brackets #5 and #6 to footrests as shown in drawing, then slide slots on forward part of cross member part #4 onto slot pins of brackets #6. Align holes on back side of cross member #4 with pins of quick - attach bracket #5 and snap into place.

Attach sub frame assembly #3 by sliding brackets at front of part #3 into frame at front of tractor and at the same time guide the uprights at rear of ass'y #3 into brackets on cross member #4 and secure with parts #26 and 27.

Lift capacity 500# with 240# in weight box plus 175# operator.

